



KOMBINOVANÁ SIRÉNA S BLIKAČEM, Ø93 MM

Série CS1

C111621005

CS1 siréna/záblesk LED oranžová 24V

- Rychlá instalace díky systému bajonetových zámků
- Výběr z 32 tónů
- Akustická intenzita 86 – 106 dB
- Krytí IP 65




POPIS PRODUKTU

Sirény pro vnitřní i venkovní použití (IP 65), druh tónu je volitelný DIP-přepínači uvnitř. Oba typy lze objednat v bílé a červené barvě.

SPECIFIKACE

Barva	Oranžová
Barva těla	Červená
Druh montáže	Horizontální, Vertikální
Frekvence blikání	1 Hz
Frekvence max.	2900 Hz
Frekvence min.	440 Hz
Hladina zvuku max.	109 dB
Hladina zvuku min.	88 dB
Hmotnost	258 g
Jmenovitý proud max.	0,041 A
Jmenovitý proud min.	0,014 A
Napájecí napětí	24 V
Napájecí napětí AC/DC max.	35 V
Napájecí napětí AC/DC min.	18 V
Ovládání zvuku	Yes

Počet tónů	32 ks
Provozní teplota max.	70 °C
Provozní teplota min.	-20 °C
Třída krytí	IP65
Typ zdroje	Oranžová LED
Zdroj světla	LED

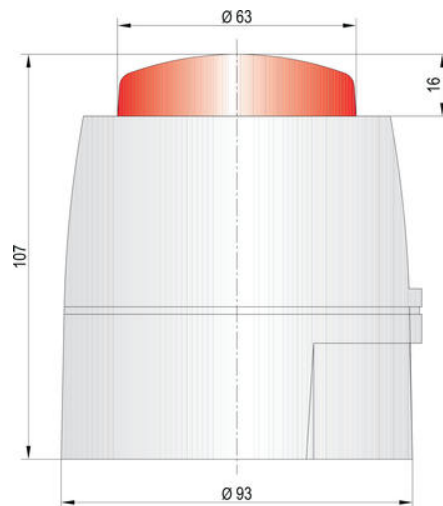

Tontabelle / Tone table

No.	Sound	Tone frequency	DR-switch	2nd stage alarm (Hz)
1	LF Siren	800 Hz @ 0.5 sec	11111	800 cont
2	Overhead siren BS standard	920 Hz @ 2 Hz	11111	800 cont
3	Wailer Tone BS standard	800/900 Hz @ 0.5 sec	11101	800 cont
4	Overhead siren BS standard	1000 Hz @ 2 Hz	11100	800 cont
5	LF Back up horn/whistle	800 Hz on 1.5 sec off	11011	200 cont
6	LF Back up alarm	800 Hz @ 1.0 sec on/off	11010	800 cont
7	LF Back up horn/whistle - Int	800 Hz @ 1.0 sec on/off	11001	800 cont
8	LF Chirp/Alarm tone BS/BS2	800 Hz cont	11000	Same tone
9	Swedish tone 17Hz	800/200 Hz @ 1 Hz	10111	800 cont
10	Australian slow whoop	Intermittent 970Hz 0.625ms on/0.625ms off	10110	1.25 sec on 0.25 sec off 800/200
11	Dutch sweep tone	970Hz cont	10101	0.5 sec on 0.5 sec off 800/200
12	Swedish siren tone	800/900 Hz @ 2 Hz	10100	800 cont
13	Swedish tone 25Hz	800/25 Hz @ 2 Hz	10011	800 cont
14	Alarm LF also siren	800/900 Hz @ 2 Hz	10010	200 cont
15	Swedish siren	800/900 Hz @ 2 Hz	10001	200 cont
16	US Temporal Pattern LF	250Hz for 0.5 sec on 0.5 sec off 3 times 1.5 sec then repeat	10000	800 cont
17	Intermittent tone BS standard	Intermittent tone 800Hz @ 0.5 sec on/off	01111	800 cont
18	BS BS2 LF BS BS2 PS 1 1 1 1 1 1 1 1	Intermittent 970Hz 0.00ms on/0.00ms off	01110	Same tone
19	Intermittent tone BS2	1000 Hz @ 0.5 sec on/off	01101	800 cont
20	BS BS2 LF	Intermittent 200 Hz 100ms on 400ms off	01100	Same tone
21	Chirp/Alarm tone	800 Hz cont	01011	Same tone
22	LF Chirp/Alarm	800/900 Hz @ 1 Hz	01010	800 cont
23	Swedish tone 25Hz	800/25 Hz @ 2 Hz	01001	200 cont
24	German 17Hz tone	800/17 Hz @ 1 Hz	01000	800 cont
25	German 17Hz tone	Intermittent 660 Hz 150 ms on / 150 ms off	00111	800 cont
26	Swedish tone 25Hz	Intermittent 660 Hz 150 ms on / 150 ms off	00110	Same tone
27	French tone BS BS2	1000 Hz for 0.5 sec and 1000 Hz for 0.5 sec	00100	800 cont
28	Swedish tone 25Hz	Intermittent 660 Hz 150 ms on / 150 ms off	00101	Same tone
29	US Temporal Pattern 17Hz	200 Hz for 0.5 sec on 0.5 sec off for 1.5 sec then repeat	00011	1000 cont
30	Siren 2 tone ramp 1/short	800/200 Hz rising then falling @ 25 sec	00010	800 cont
31	BS BS2 LF - T-siren	Intermittent tone 800/970 Hz @ 2 Hz	00000	800 cont
32	Siren 2 tone ramp 1/long	800/200 Hz 3 sec rising / 3 sec falling	00001	800 cont

